



Unable to select Close Curve

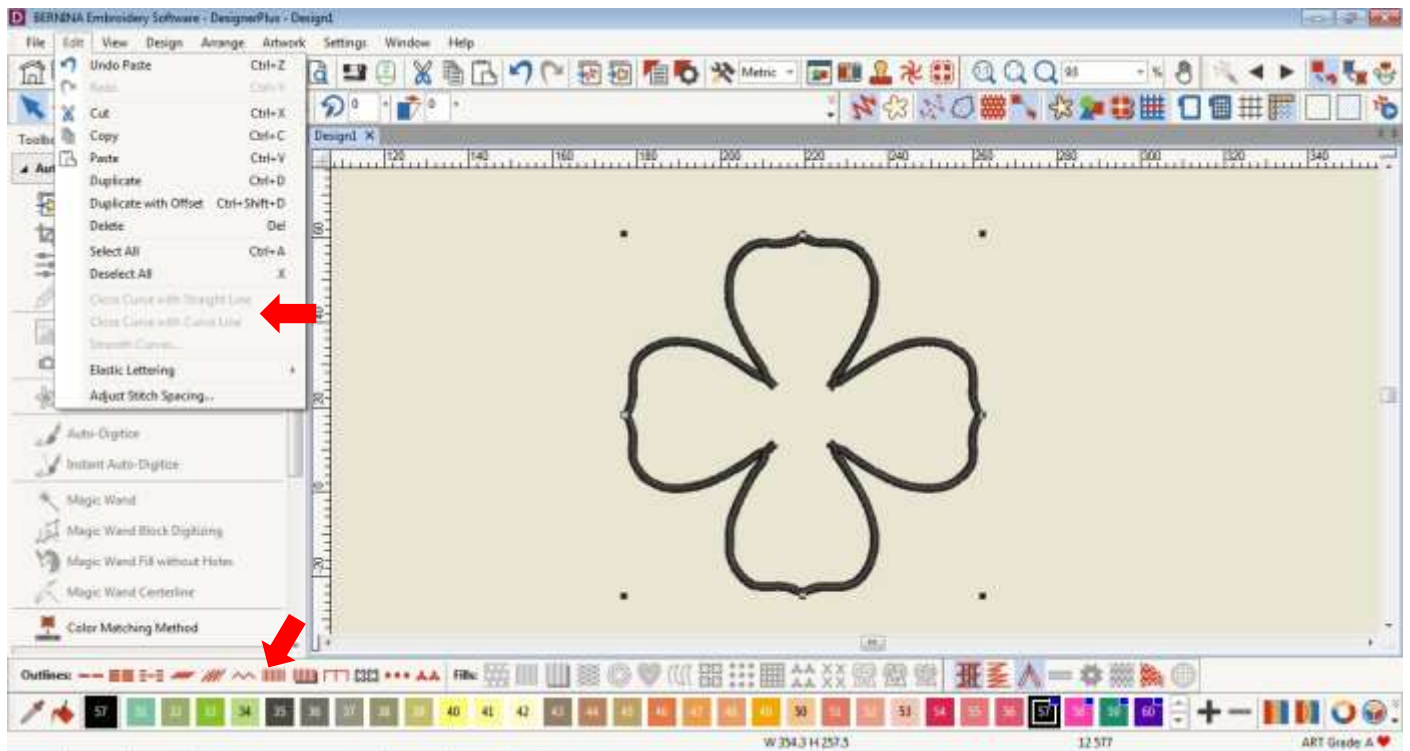


If the Close Curve options are not selectable, ensure that an Outline stitch is highlighted when the object is selected.


Incorrect Close Curve

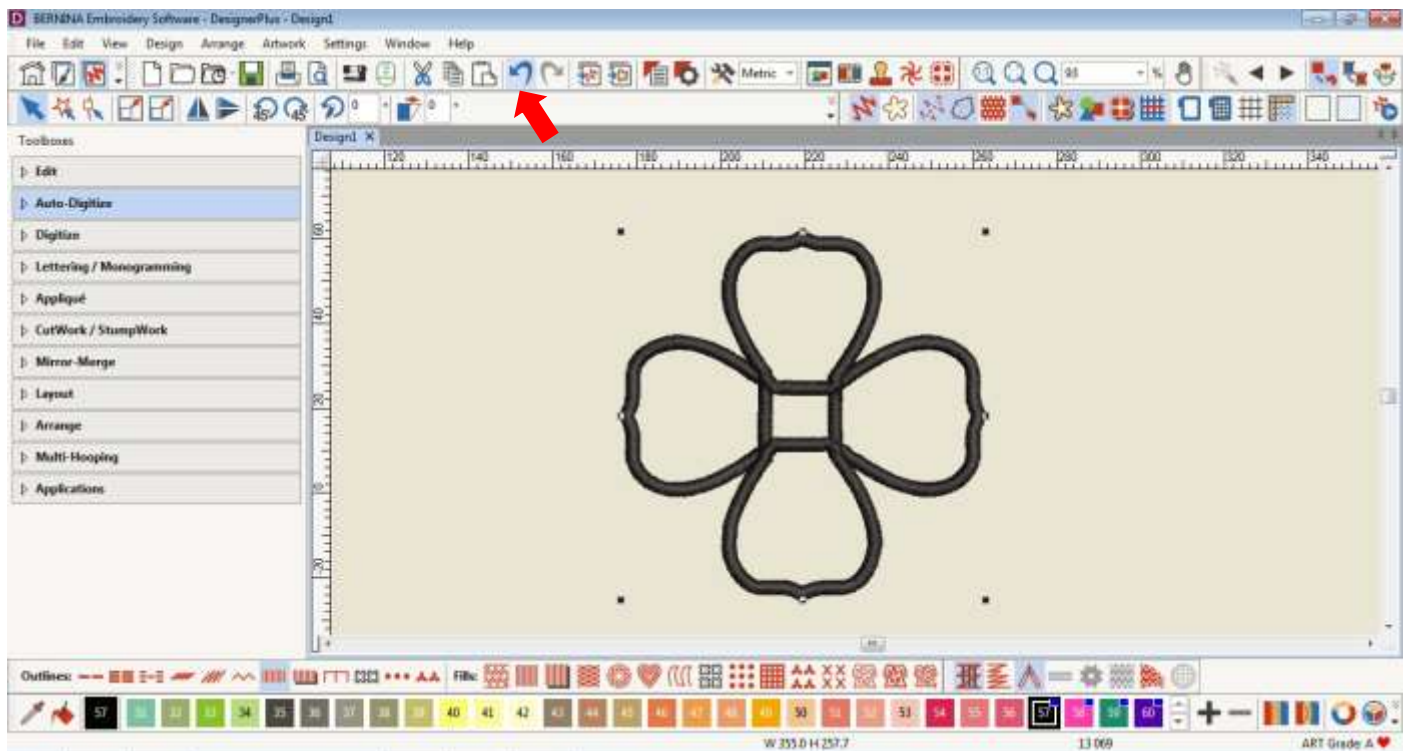


If the object doesn't connect properly once you've selected Close Curve, click the Undo button.
None of my petals connected when I Auto-Digitized the artwork. When I closed the curve

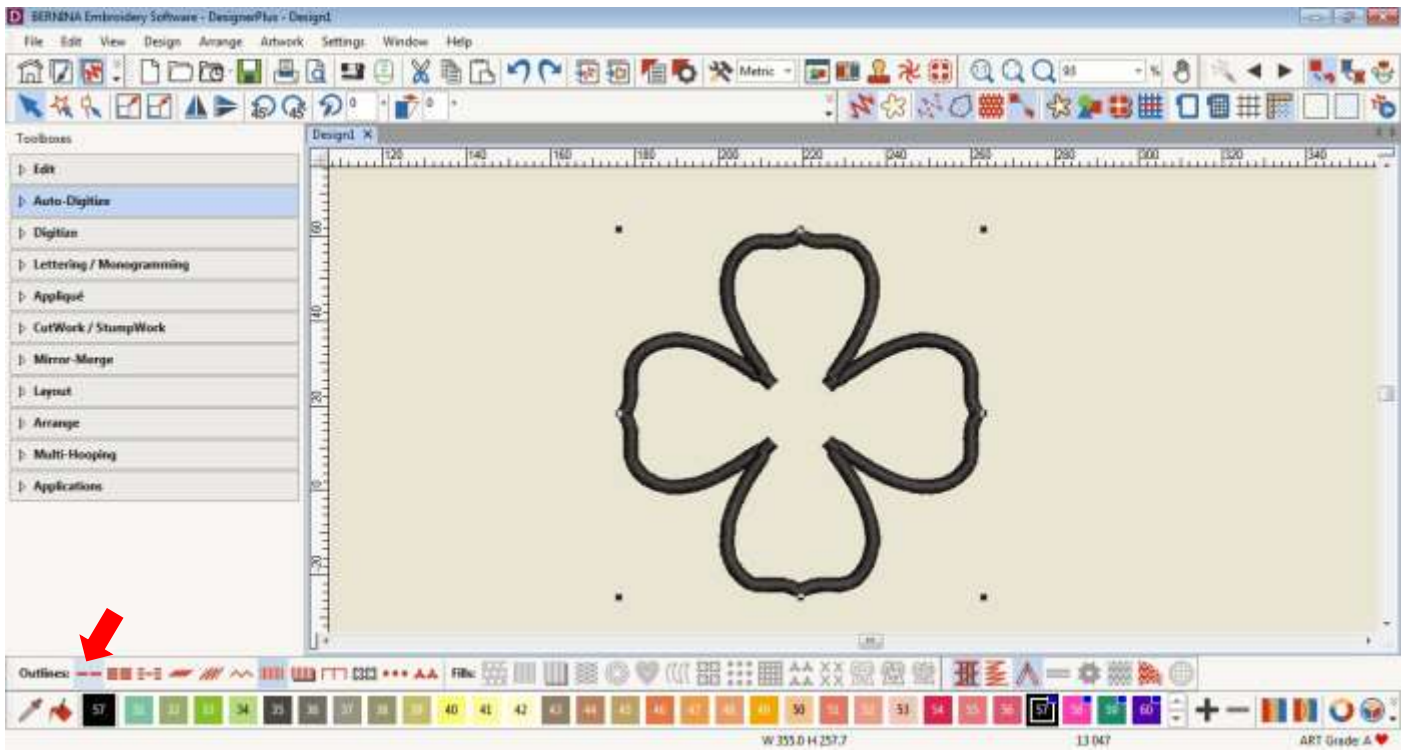


Select the Single Outline stitch.

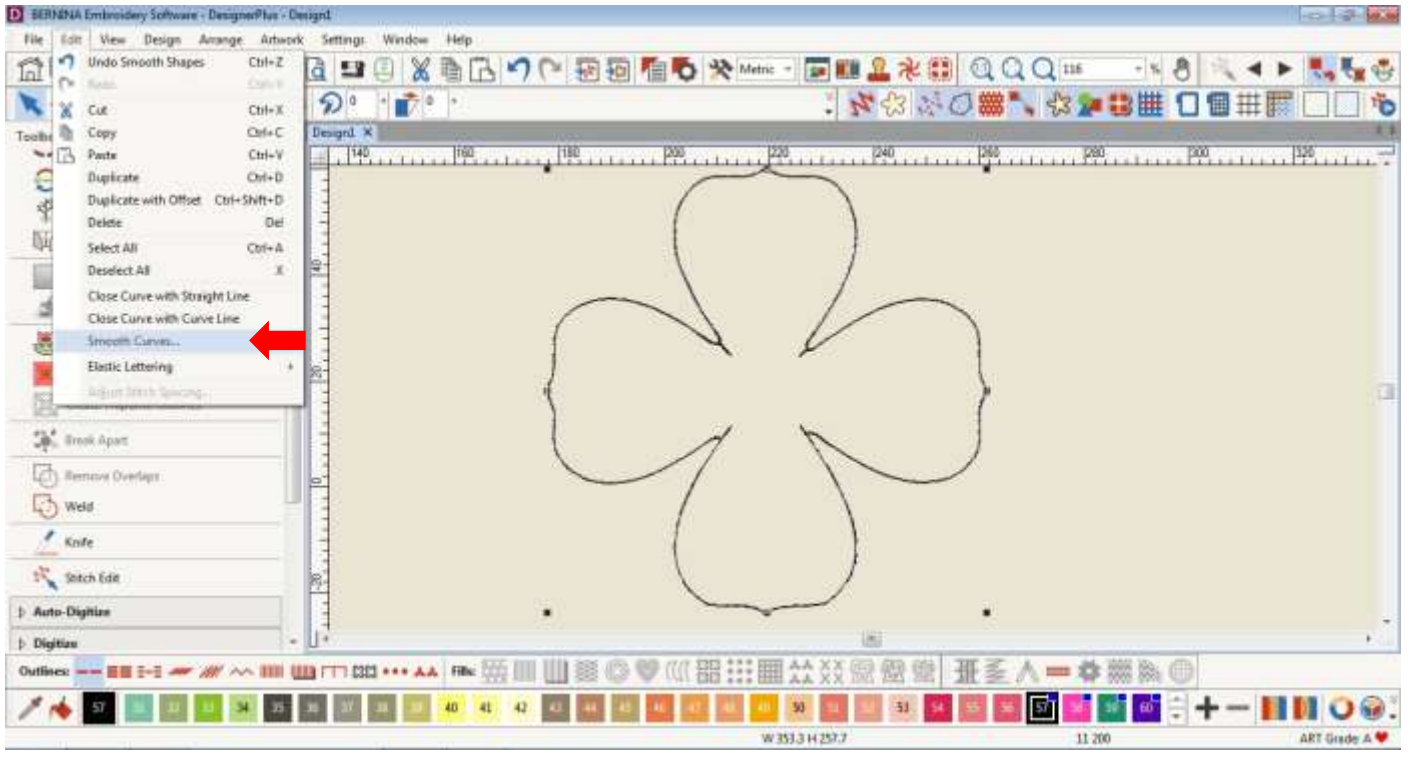


While the whole Object is selected, click on the Edit tab and Smooth Curves, then Ok on the pop up. This will reduce the amount of nodes which will make reshaping easier in the next step.

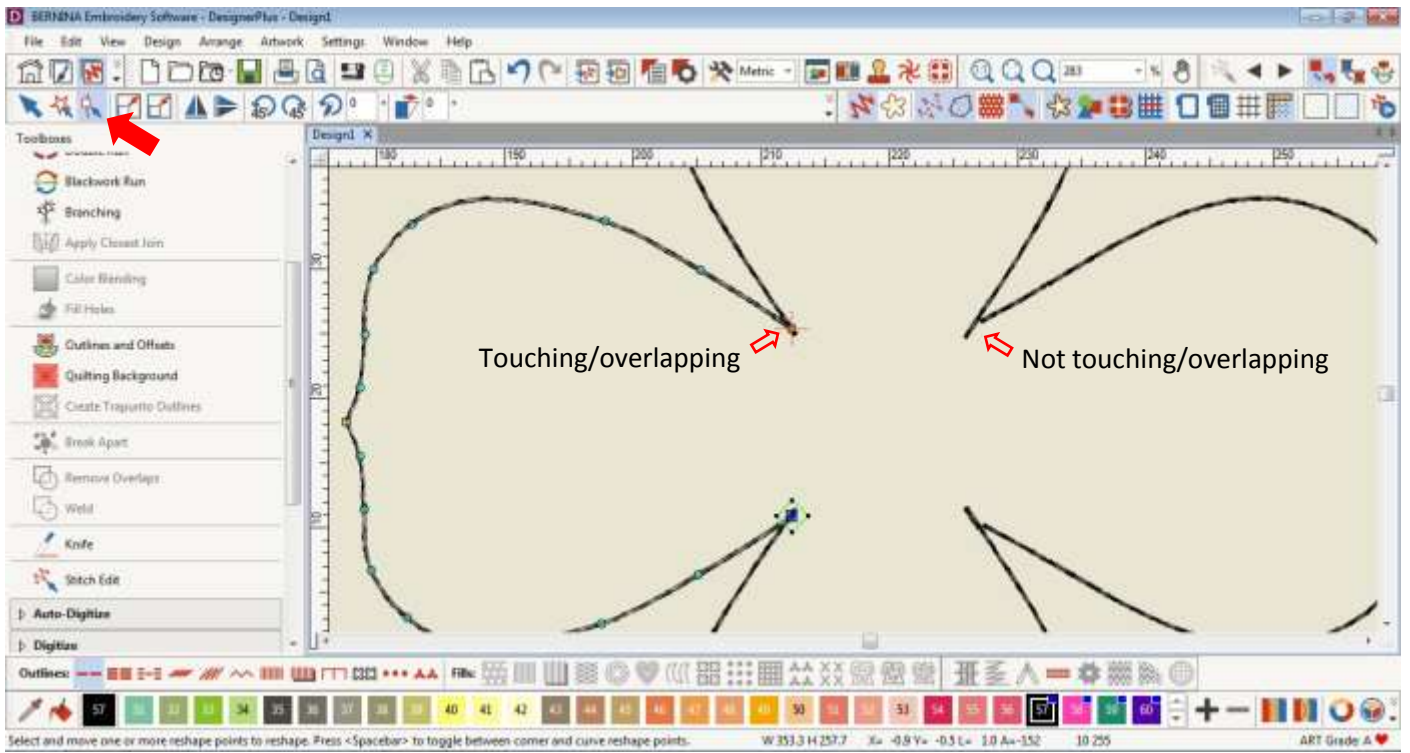


Using the Reshape Tool, ensure that the connection points touch/overlap.

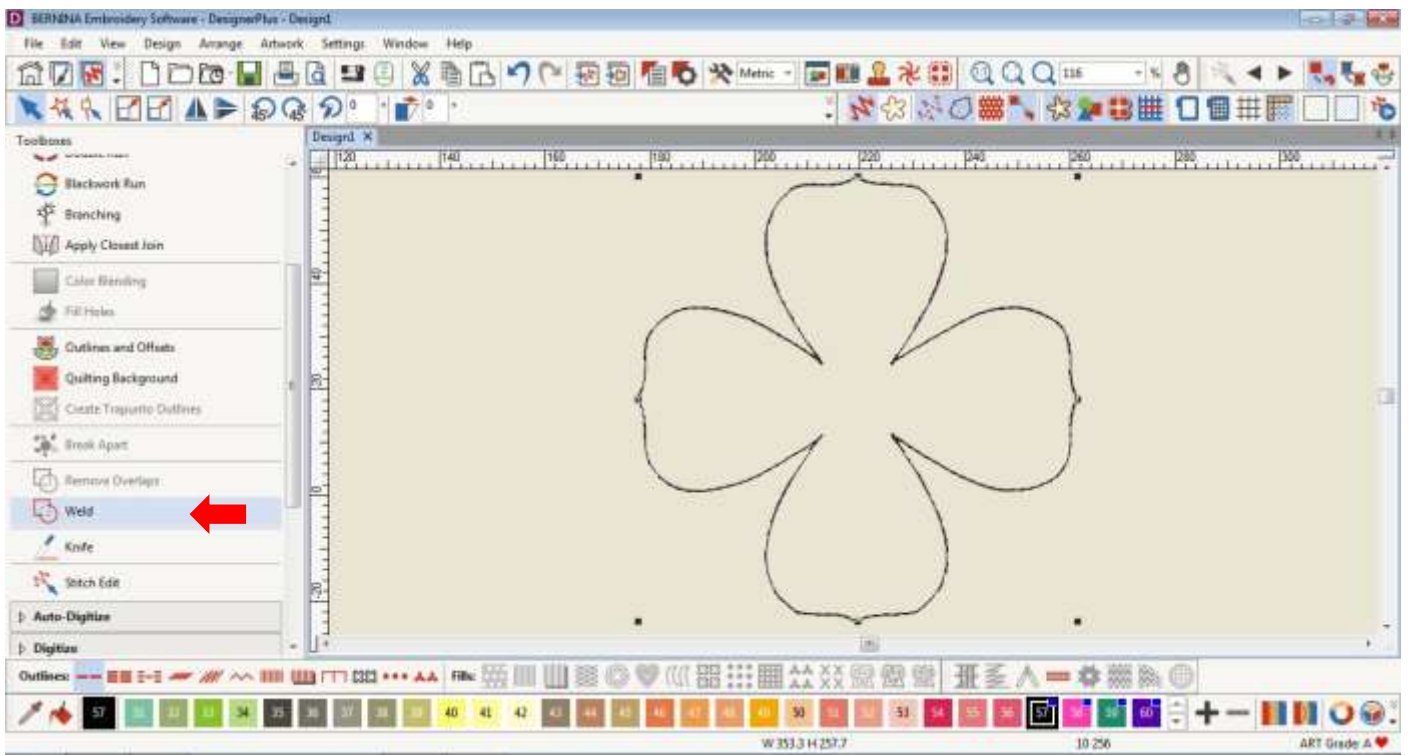

Select the whole object and click on the Weld Tool from the Edit Toolbox.

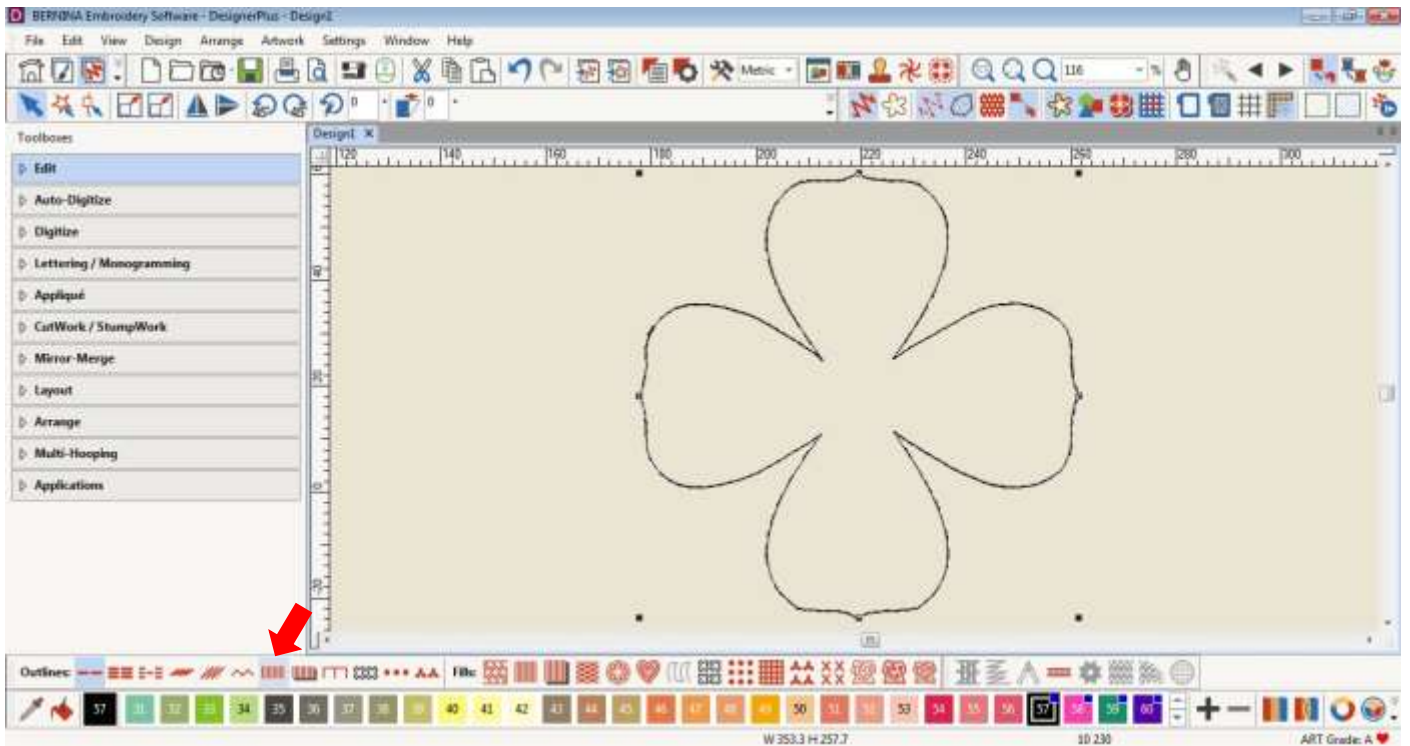

Now that the object is a whole, change the Stitch Outline to Satin.

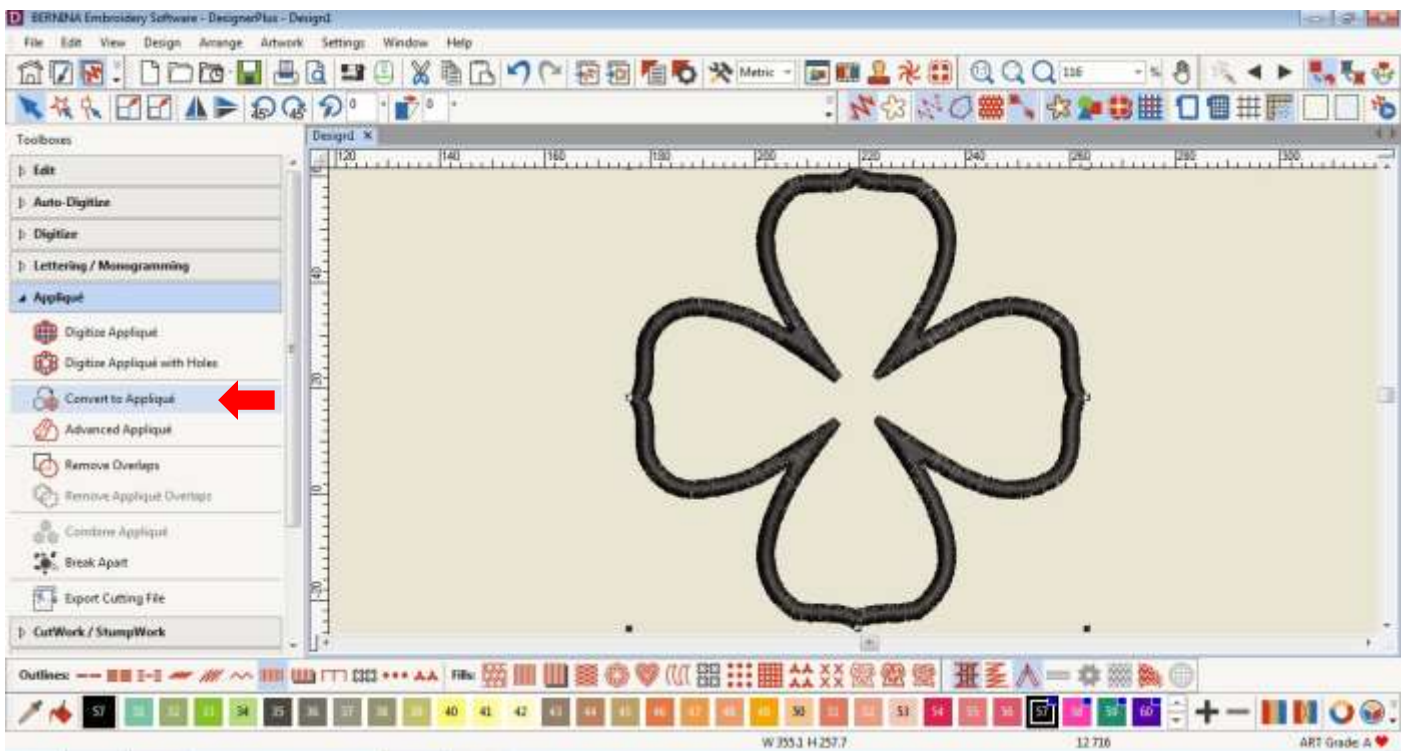

Click on the Convert to Appliqué Tool.